

The handheld bar code scanners that are shipped from Shoptech are pre-configured to run with the E2 Shop System Data Collection terminals. However, if the configuration has been altered or you purchased the scanner from another vendor, you may need to re-program the scanner to the proper configuration. These instructions are for programming the of the Wand Emulation mode. In other words, the scanner will be connected to one of your Data Collection terminals, not a computer.

QuickScan IS4500

Print the following pages from the Product Reference Guide to correctly program the scanner: 4, 5 and 19

The Product Reference Guide can be found on the CD that was supplied with the scanner.

1. On page 4 scan the **Set All Defaults** bar code.
2. From page 5 scan the **Enter Group** bar code and the **(Wand)** bar code. Next scan the **EXIT** bar code.
3. From page 19 scan the bar code **Enter Group for Code 39 ENABLE**. Scan the **Exit** bar code.

If you do not have the Guide, click the link below:

www.shoptech.com/faq/Hardware/Data_collection/Scanners/IS4500_scanner.pdf